

Web site: www.flexstake.com
e-mail: fsi@flexstake.com

Utility Marker

*The economical impact-resistant marking post
for parks, recreation and industry.*

BURY TO DIRT LINE

DESIGN CRITERIA

The FlexStake Utility Marker (UM) is an economically priced, moderate impact, off-road, sign post or delineator that is especially well suited for marking cross country pipelines, underground cables or other buried devices. Depending on label design, the convex faces are wide enough (three inches) to carry identifying signage readable for up to 150 feet.

Though not as bullet-proof as our hinged (ultra-high-impact) highway delineator, the Utility Marker can still take all kinds of abuse. In certified tests, this unhinged marker has withstood over 75 automotive hits at 35 mph; and cattle and deer can rub against it without pulling the post out of the ground.

CONSTRUCTION


The Utility Marker weighs only a little over a pound – a real plus if you are carrying an armload of them. The post is extruded in a patented, impact-resistant, duplex shape from a high strength, color impregnated, UV-stabilized polycarbonate that can last for years in the sun. Our unique barbed anchor is molded from a special high-density post-consumer reground polymer that is totally unaffected by adverse soil chemistry.

Utility Markers are available in 2, 3, 4 and 5 foot lengths above anchor. Standard colors are: white, red, yellow, environmental green, blue, gray, and brown. Other colors and lengths are available on special order.

POP-AND-GO ASSEMBLY

To simplify packaging and reduce shipping costs, Utility Marker is usually shipped unassembled. However, assembly just takes a few seconds. Here's how it's done:

1. Locate the end of the post with the holes drilled in it.
2. Press that end of the post onto the base until the post is seated on the anchor boss. The locking pins on the base will now be lined up with the holes in the post.
3. Press both sides of the post to force the pins through the holes. The pins will lock in place with a snap, and the assembly will now be unified.
4. To install Utility Marker: Drill or dig a hole three inches wide by eighteen inches deep. Bury the anchor and post up to the dirt line. Pack dirt firmly around the post and anchor.

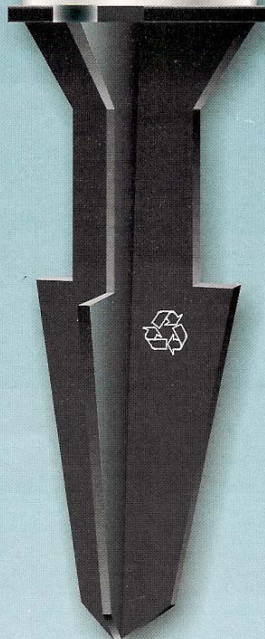

FLEXSTAKE™

2150 Andrea Lane, Fort Myers, FL 33912

Phone (800) 348-9839

941-481 -FLEX (3539)

FAX 941-482-FLEX (3539)

FlexStake is the registered trademark of FlexStake Inc. All FlexStake products are covered by patent or patents pending. Illustrations are artists drawings that may not be an exact replica of the product. Specifications are subject to change without notice.